

NEC Mobile Projection Unit

Instructions :

1. Plug video projector power cord into electrical outlet and into the front of the projector.
2. Turn the On/Off switch to 'on.' It is located directly above where the power cord is plugged into the unit.
3. Press the Power – On/Off button on the top of the projector. You should hear the projector fan kick on and a blue screen will be projected in a few seconds as the machine warms up.
4. With the blue screen projecting on the screen, turn on either the DVD player or the VCR, depending on which type of video you will be using.

To play a DVD :

1. Press the MENU button. You should see a series of drop down menus, similar to those on a computer.
2. Use the up and down arrows to select SOURCE MENU.
3. Press ENTER.
4. Use the up/down arrow keys to select S-VIDEO-AUTO (this selection is second from the top).
5. Press ENTER.
6. If the DVD player has been powered up correctly an image should appear once you have pressed ENTER.

To play a VCR tape :

1. Press the MENU button. You should see a series of drop down menus, similar to those on a computer.
2. Use the up and down arrows to select SOURCE MENU.
3. Press ENTER.
4. Use the up/down arrow keys to select VIDEO-AUTO (the top selection).
5. Press ENTER.
6. If the VCR has been powered up correctly, an image should appear once you have pressed ENTER.

Notes:

- ZOOM and FOCUS buttons are located on top of the projector.
- Speakers are located on the second shelf of this cart. Volume is controlled on these speakers.
- When finished, please power off the projector and VCR/DVD player and unplug the cart's power cord.