



NORTHWESTERN UNIVERSITY SCHOOL OF LAW

Instructions for Proxima Desktop Projector 5500

Section A- Instructions to use Computer or Laptop

1. Make sure MAIN POWER is on (located on the lower left of the projector.)
2. Press “STAND BY” on top of projector (you will hear the projector warm up.)
3. Connect Video cable into #1RGB IN and the other end to the output of the computer.
4. Turn on computer or laptop
5. Toggle your computer settings by holding down the FN key and pressing the F8 key until your image is seen on your monitor and the big screen
6. If image is still not seen on big screen press INPUT button on top of projector to RBG 1.
7. ZOOM and FOCUS adjustments are on top of projector
8. Volume, Color, and Contrast are adjustable with the MENU button on top of projector
9. To run Audio- plug speaker cable into speaker output on computer-then plug the other end of the cable into AUDIO IN #1 on the projector
10. To turn off equipment, see “**Section D – Instructions to Turn Off Equipment**”

Section B- Instructions to use VCR

1. Make sure MAIN POWER is on (located on the lower left of the projector)
2. Press “STAND BY” on top of projector (you will hear the projector warm up)
3. Connect the stereo cable to VCR-the yellow jack goes to the yellow VIDEO OUT plug the white jack goes to the white AUDIO OUT plug
4. Connect the stereo cable to the projector- the yellow jack goes to the yellow VIDEO 1 plug- and the white jack goes to the white L AUDIO 1 plug.
5. If image is not seen press INPUT button on top of projector to VIDEO 1
6. ZOOM and FOCUS adjustments are on top of projector
7. Volume, Color, and Contrast are adjustable with the MENU button on top of projector
8. Insert VHS tape into VCR and press play on the VCR
9. To turn off equipment, see “**Section D – Instructions to Turn Off Equipment**”

Section C- Instructions to hookup External Speakers

1. Plug 1/8” jack on R speaker into AUDIO OUT (located on the back of the projector)
2. Plug stereo jack on L speaker into R speaker
3. Plug power transformer into R speaker then plug in power transformer
4. Turn on speakers (on/off button on the back of speakers)
5. To turn off equipment, see “**Section D – Instructions to Turn Off Equipment**”

Section D – Instructions to Turn Off Equipment

1. If you are using the projector, turn off the projector by pressing the main power button on the back of the projector
2. If you are using the VCR, eject the VHS tape and press the Power button on the VCR

3. If you are using external speakers, turn off speakers by pressing the on/off button on the back of the speakers