



NORTHWESTERN UNIVERSITY SCHOOL OF LAW

Instructions for Proxima DP 9270 Desktop Projector

Section A- Instructions to use Computer or Laptop

1. After plugging in the projector, wait for READY light on top of projector to come on
2. Then press and hold down POWER button until projector comes on (the word PROXIMA will appear on the screen, there will be a countdown from 30 sec.)
3. Connect video cable into INPUT 1 ANALOG and the other end to the video output of computer
4. Turn on computer or laptop
5. If image is still not seen, press the INPUT button on the top of the projector to INPUT 1
6. Toggle your computer setting by holding down the FN key and pressing the F8 key until the image is seen on your monitor and the big screen
7. ZOOM, FOCUS, and VOLUME adjustments are on the top of the projector
8. To turn off equipment, see “**Section C – Instructions to Turn Off Equipment**”

Section B- Instructions to use VCR

1. After plugging in the projector, wait for READY light on top of projector to come on
2. Then press and hold down POWER button until projector comes on (the word PROXIMA will appear on the screen, there will be a count down from 30 sec.)
3. Connect the stereo cables to the VCR – the yellow jack goes to the yellow VIDEO OUT plug-and the white jack goes to the white AUDIO OUT plug.
4. Connect the stereo cable to the projector- the yellow jack goes to the yellow VIDEO /Y plug and the white jack goes to the AUDIO-L plug
5. If image is still not seen press INPUT button on top of the projector to INPUT 3.
6. ZOOM, FOCUS and VOLUME adjustments are on top of the projector
7. Insert VHS tape into VCR and press play on the VCR
8. To turn off equipment, see “**Section C – Instructions to Turn Off Equipment**”

Section C – Instructions to Turn Off Equipment

1. If you are using the projector, turn off the projector by pressing the main power button on the back of the projector
2. If you are using the VCR, eject the VHS tape and press the Power button on the VCR